


# Tent 3x3

Mounting Instruction




1

Gently expand the frame.

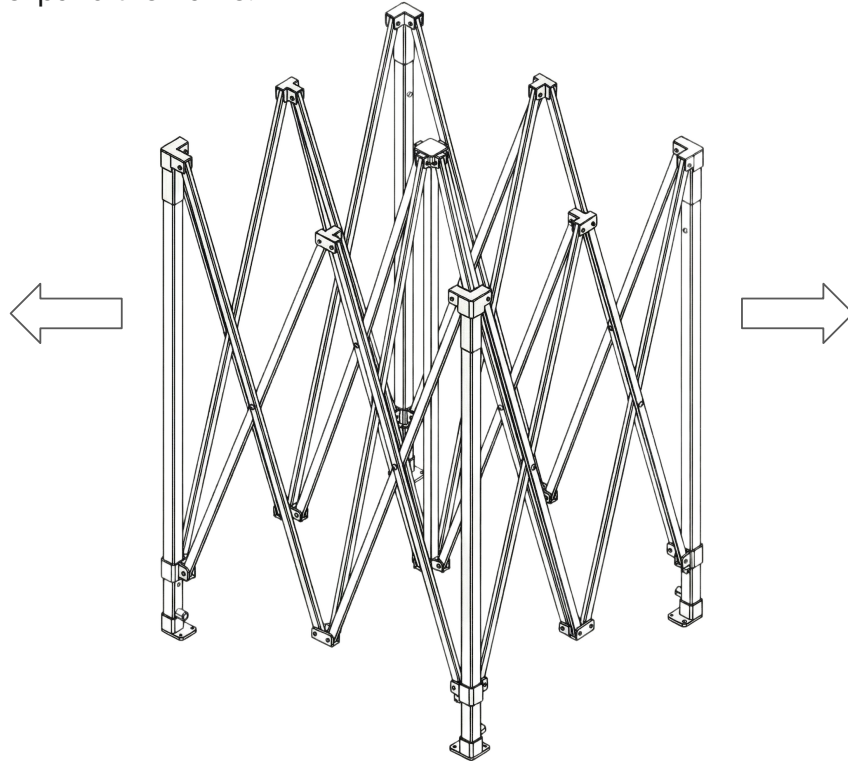


2

Place the roof cover on top.  
Lift the frame legs upwards until they lock with an audible "CLICK".

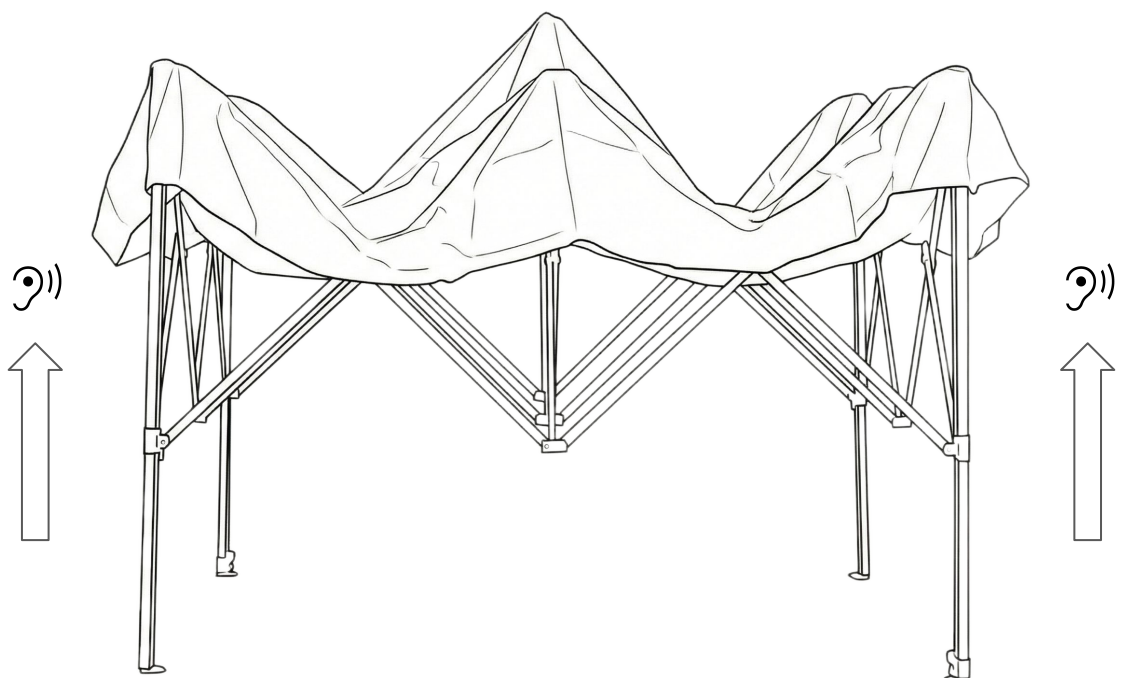



**3**

Secure the roof corners by attaching the Velcro strips to the frame.

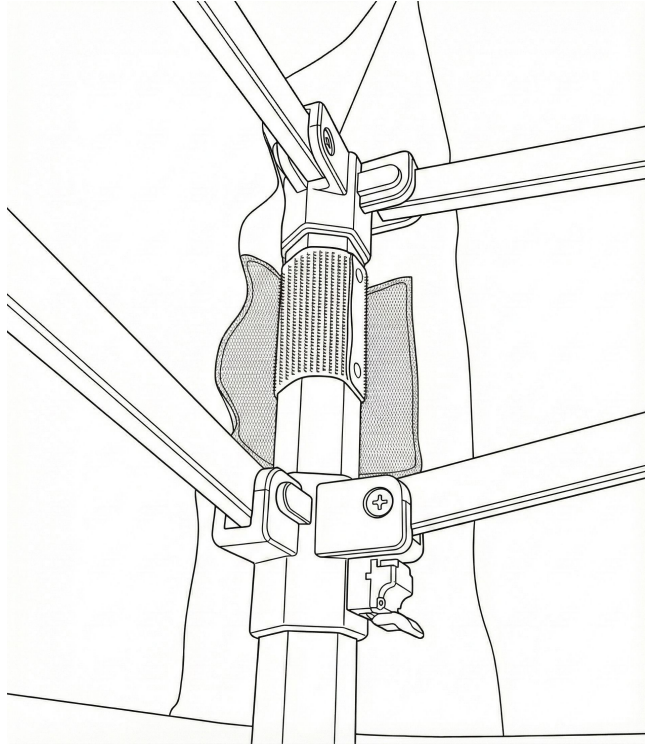
**4**

Tension the center pole by turning the crank handle.

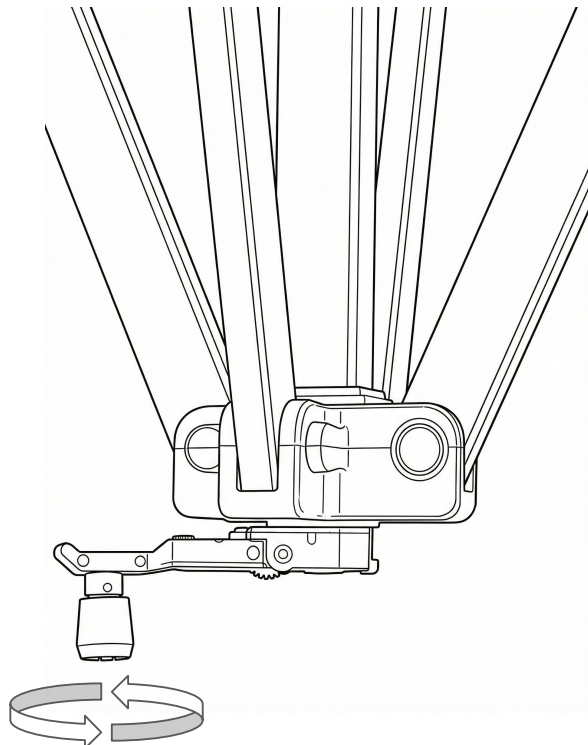

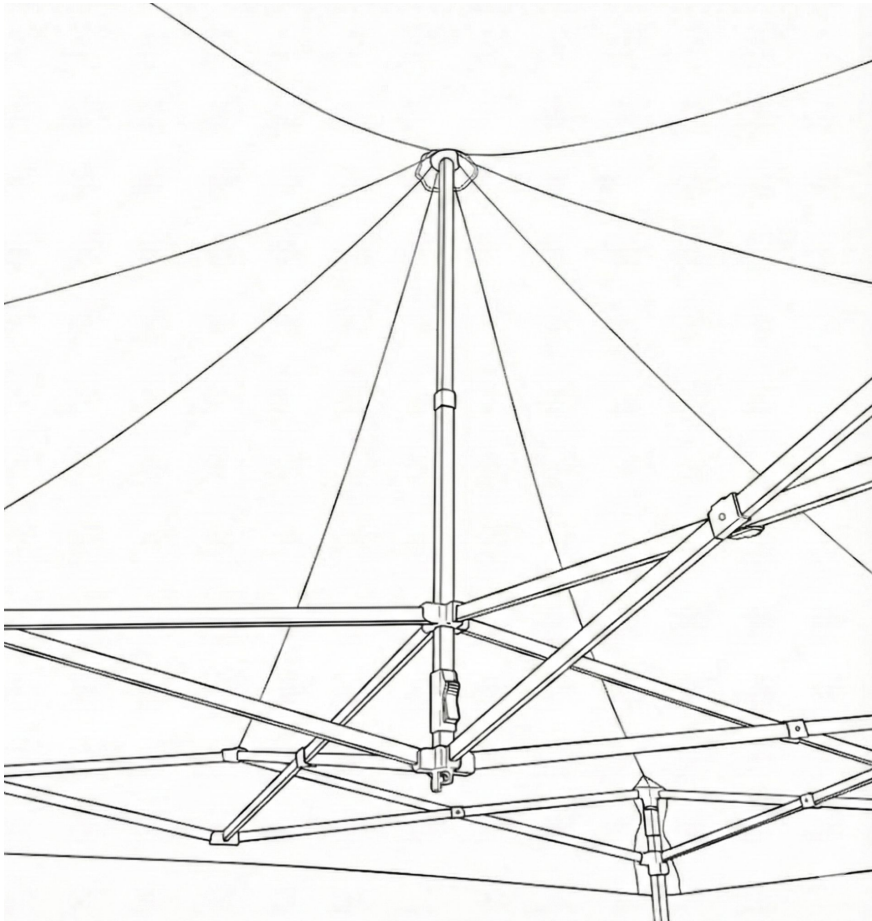**5****6**

(Optional): To anchor the tent, clip the carabiner straps to the corners, tighten the lines, and drive the pegs into the ground.

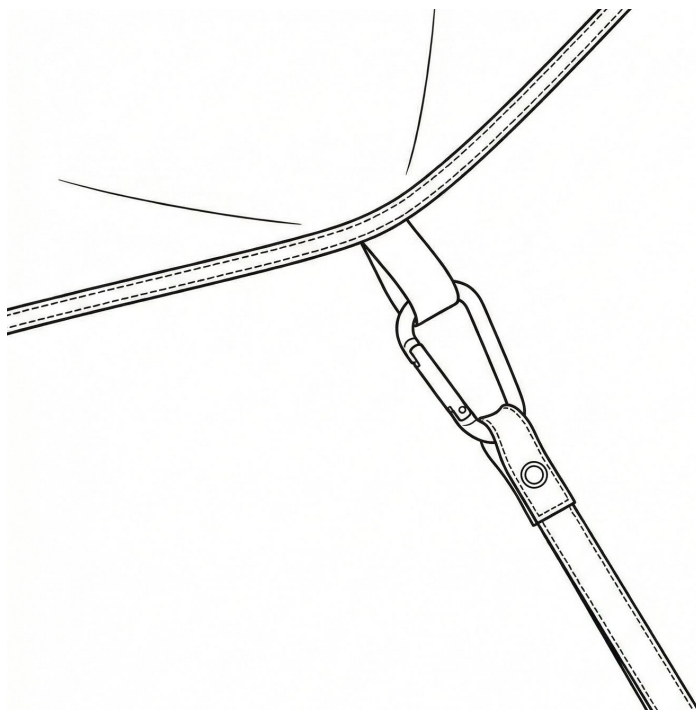

7

